

Insta-TEST[®]

LOW RANGE Phosphate

INSTANT RESULTS!



25 POOL & SPA TEST STRIPS

LaMotte
Chestertown, MD 21620
www.lamotte.com/insta

Low Range
Phosphate
ppb
Code 3021-G



1. Fill test tube (0106) to 10 mL line.
2. Remove one test strip from vial. Cap vial tightly after removing strip. Gently bend strip in half (do not fold) with pads facing inward. Place strip inside test tube cap (as shown).
3. Cap test tube and invert slowly 5 times (invert the tube slowly to allow the bubble to go from the top to bottom and bottom to top).
4. Remove cap and test strip.
5. Place bottom of test tube on white boxed area of color chart. Look down through OPEN test tube (as shown) and compare to color chart.

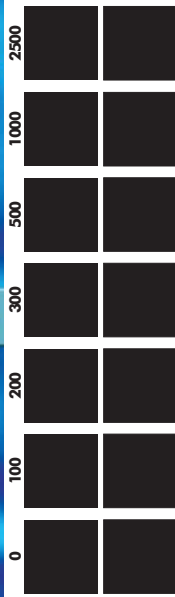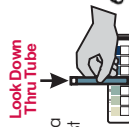

TIPS

Cap vial tightly after removing strip.
Keep wet fingers out of the vial.
Store in a cool, dry place.
For best results, read in natural light.

